



**Insertion Tool**

**Application Tooling Specification Sheet**



**Order No. 63812-0900**

**FEATURES**

- This Insertion Tool is designed for the insertion of CTX280 Seal Plugs into a CMX connector.

**SCOPE**

**Products:** CTX280 Seal Plug for CMX Modules.

Seal Plug Order No.	Female Module Order No					
98492-1091	198009-1001	198009-1002	198009-1003	198009-1004	198009-1011	198009-1013
	198009-1021	198009-1023	198009-1031	198009-1033	198009-1041	198009-1043
	198009-1051	198009-1053	198009-1061	198009-1063	198009-1071	198009-1073
	198009-2001	198009-2002	198009-2003	198009-2004	198009-2011	

**OPERATION:**

1. The seal plug has a specific direction in which it is inserted into the CMX Module See Figure 1.


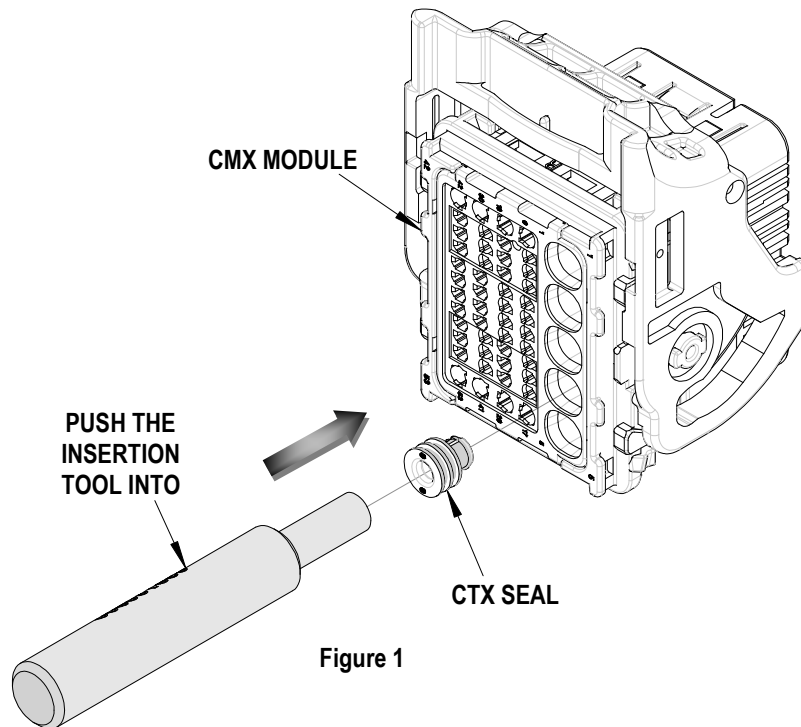


Figure 1

2. Gently push the seal plug with the insertion tool into the desired cavity of the CMX Module.
3. The seal plug should be inserted approximately 14.7mm from the opening in the module. See Figure 2.

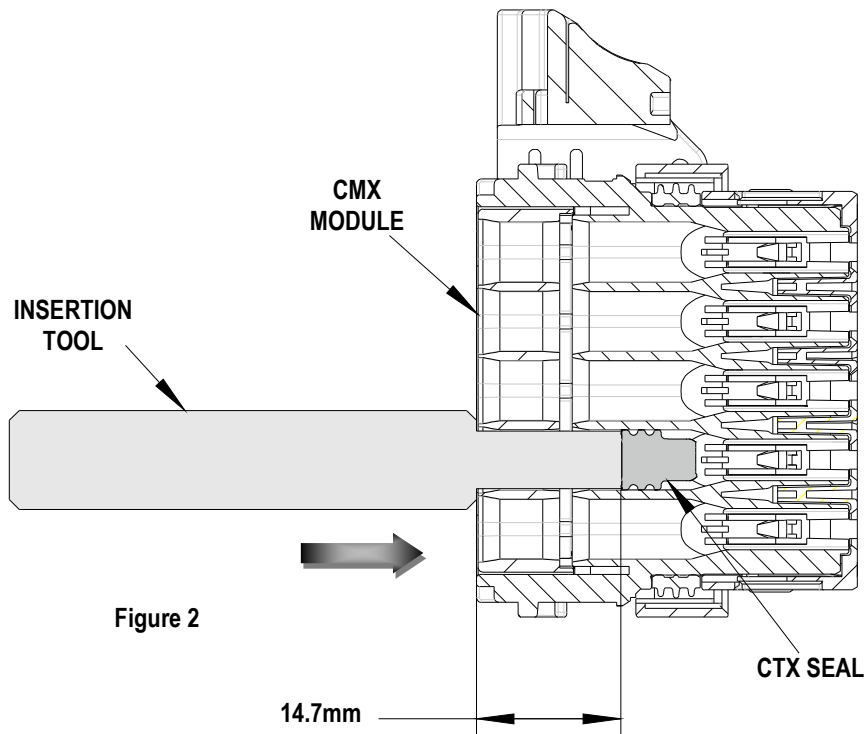

4. Molex does not offer repair parts for Insertion Tools due to the inexpensive nature of these tools.

**CAUTION:** Molex specifications are valid only when used with Molex terminals, modules, and tooling.

### Contact Information

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Visit our Web site at <http://www.molex.com>